



## Installation of driver which comes with Win8/Win10

After installing Coolmay HMI software on Win8/Win10 system, only when the user forbid “Mandatory signature” of the drive program can the program downloaded directly by programming cable. After finishing Step 3, the screen will jump to “restart setting screen”, it’s suggest to take a photo or write down the setting methods of step4 and step5 before operation.

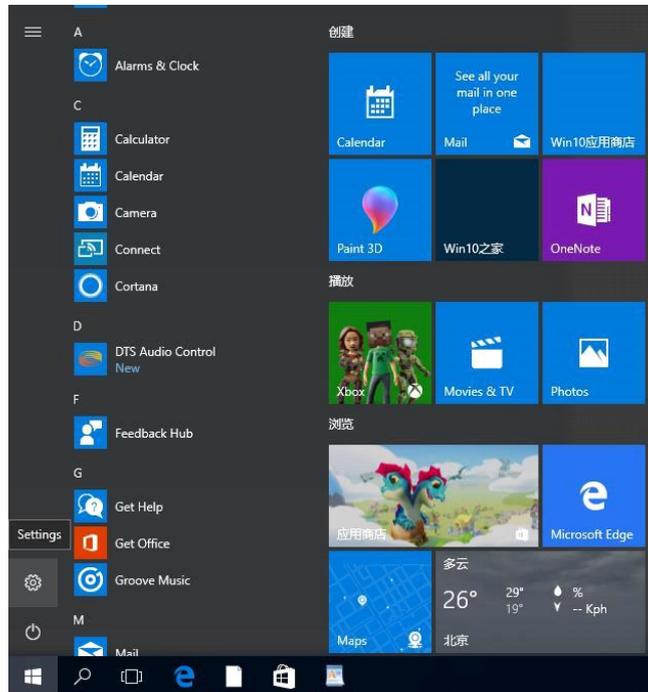


1. Click [Menu]----[settings]


2. When entering into setting window, click [Update&Security](Windows update, recovery, backup)

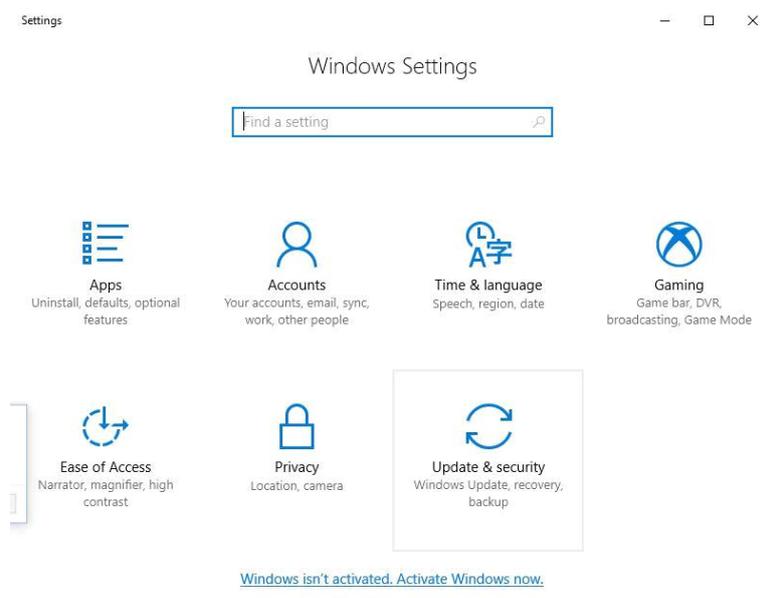


3. Click [Recovery]-[Advanced startup]- [Restart now], after restarting, the screen will jump to [Startup settings]

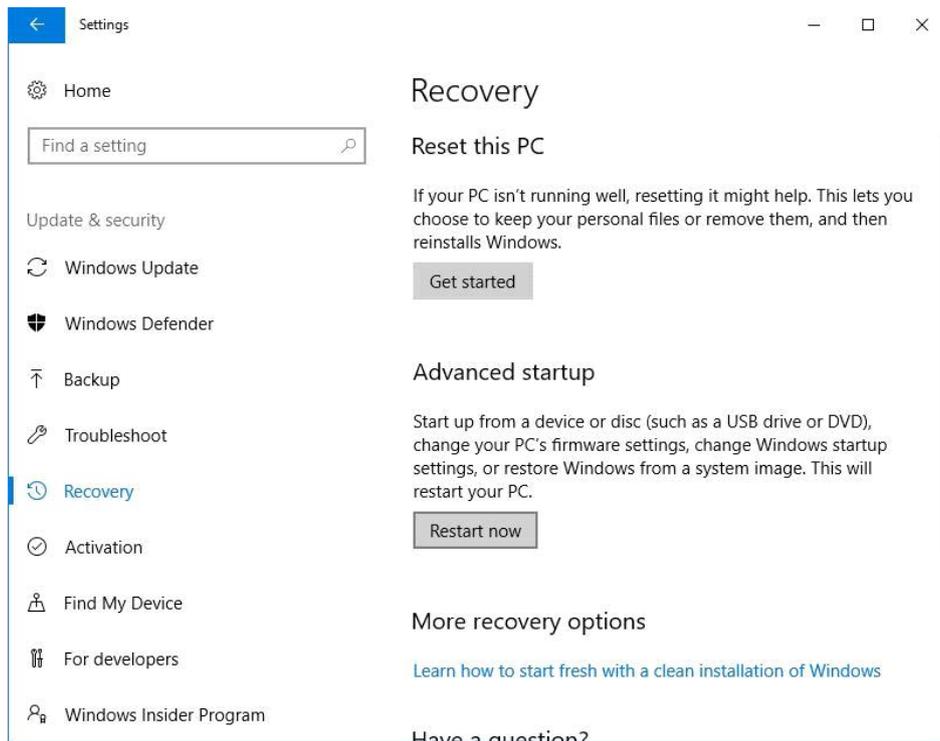


4. After entering into **【Startup Settings】** , click [Restart] to activate these programs.

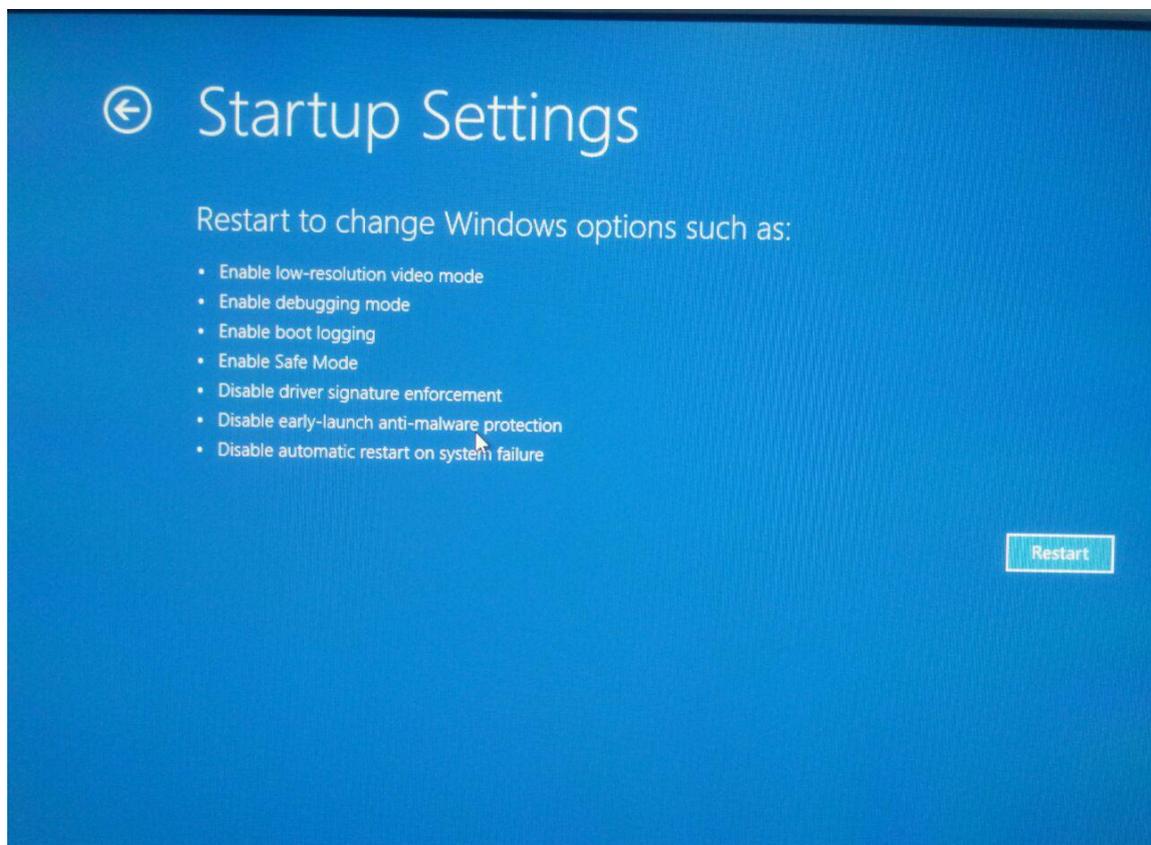



- press numer 7 or F7 to forbid [Mandatory signature]
- The computer will restart, please install the driver program then. Open computer management, [USB serial device] will appear in [ports], then right click it, then click [update driver]:

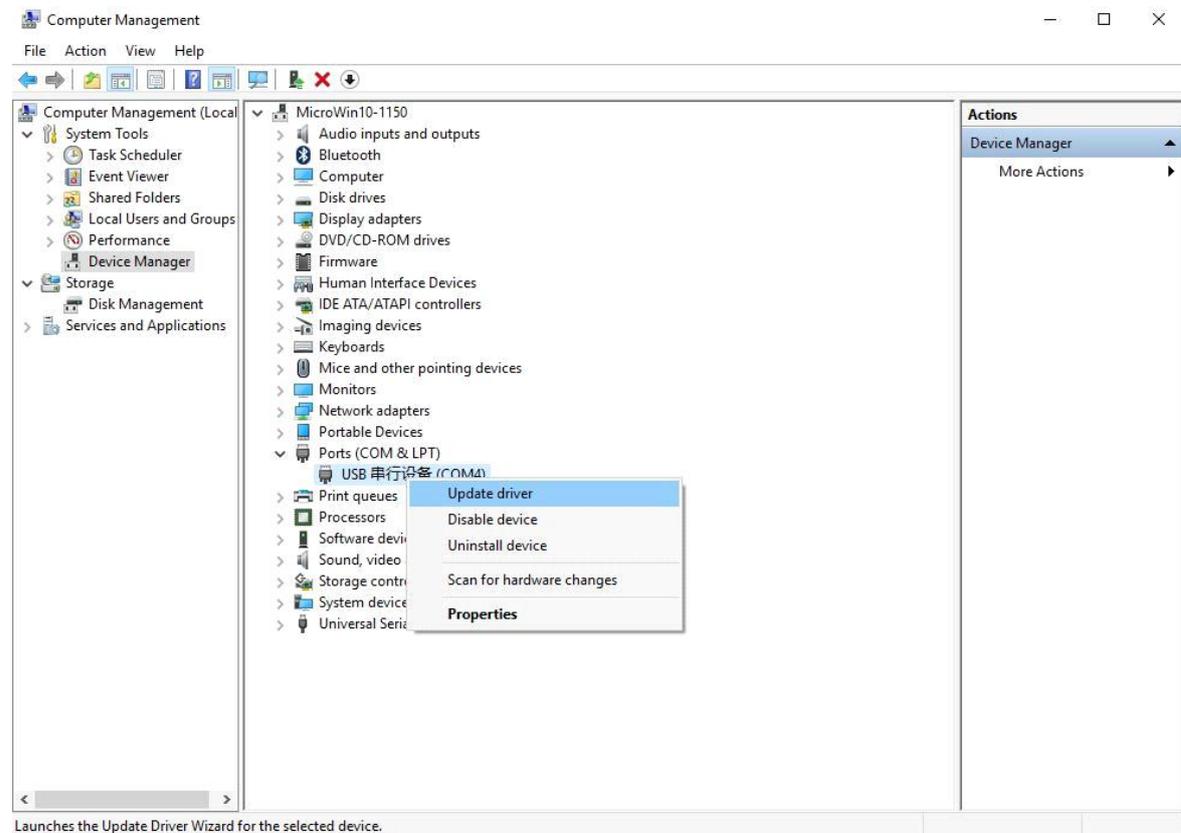

- Select [Browse my computer for driver software]

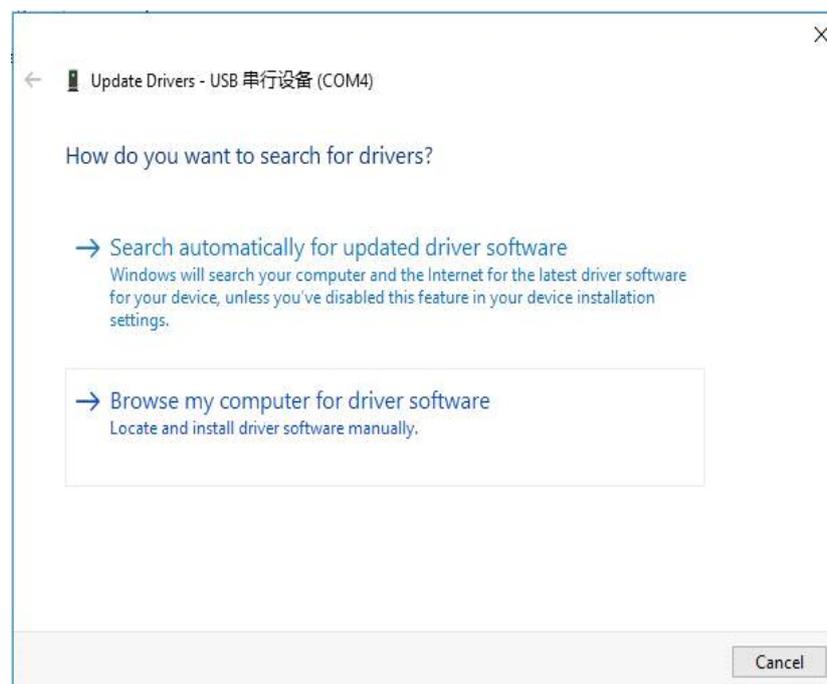


## 8. Choose CoolmayHMI, and click [Next]:

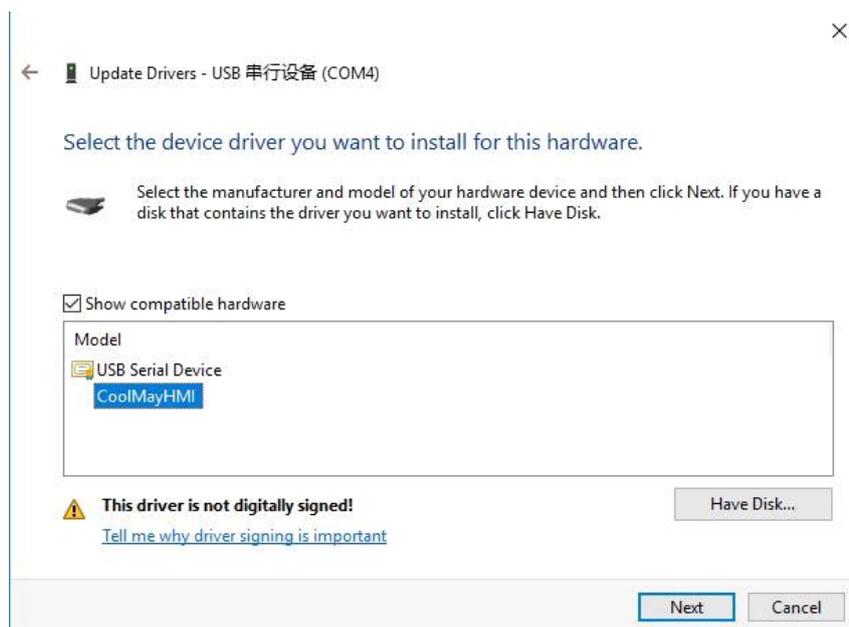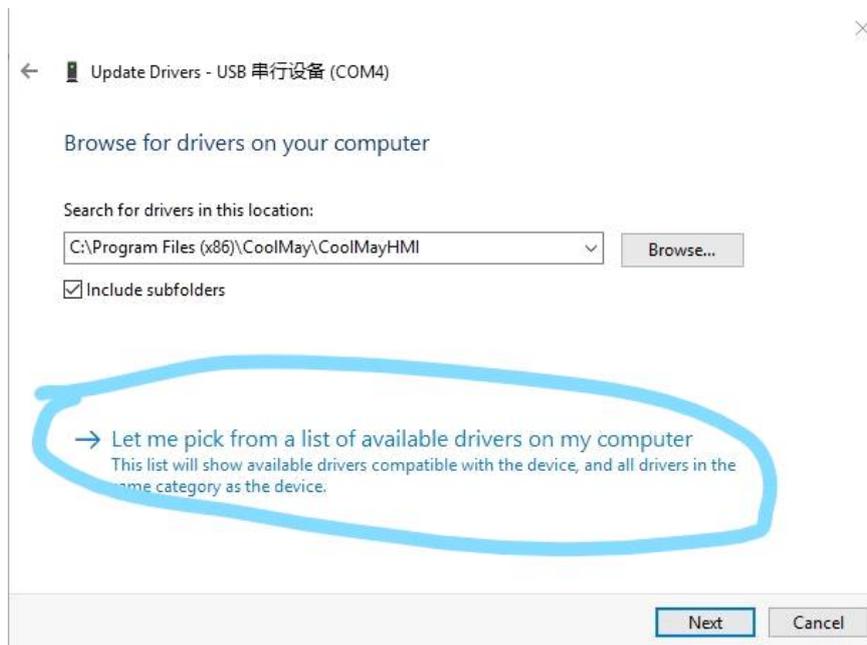



9. Select “install this driver software anyway”, which means the driver is installed successfully




10. At the same time, CoolmayHMI will appear in the network adapter, and the correspondent local link will appear in network connection:

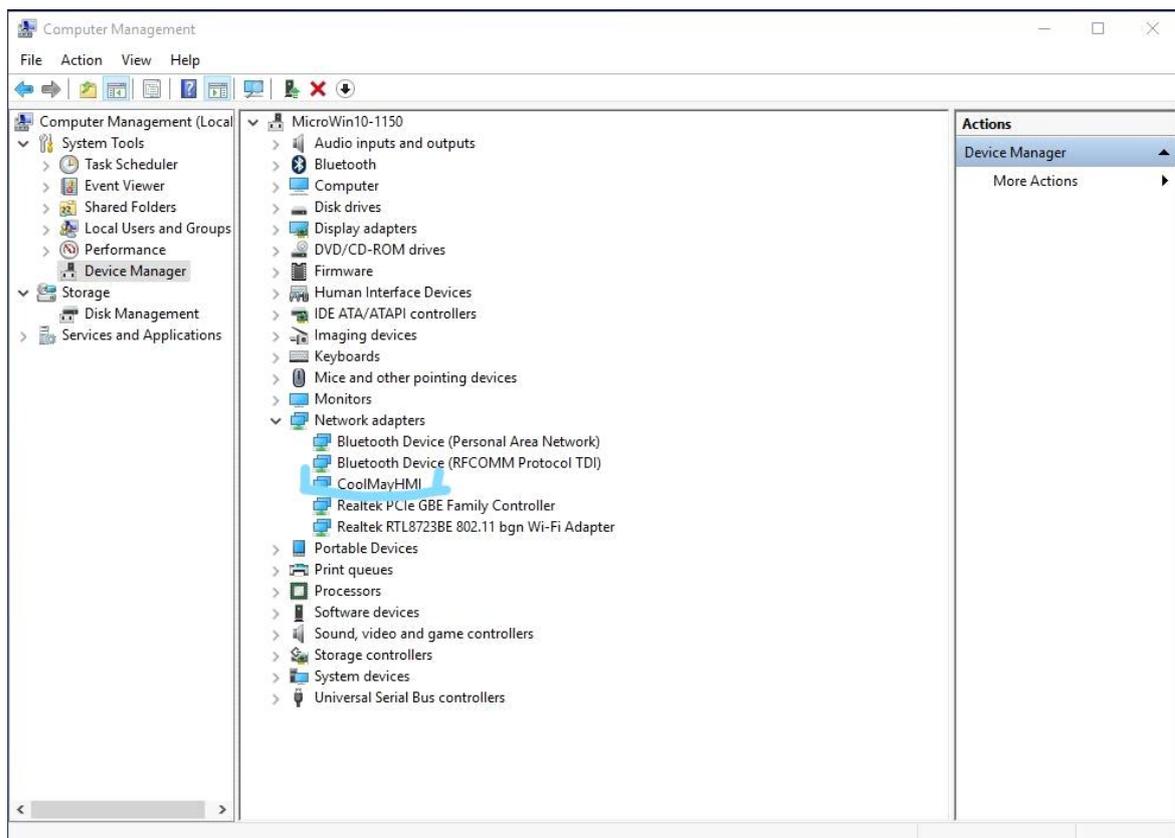


11.The driver need to be operated by Administrator, right click CoolmayHMI software and click attribute button

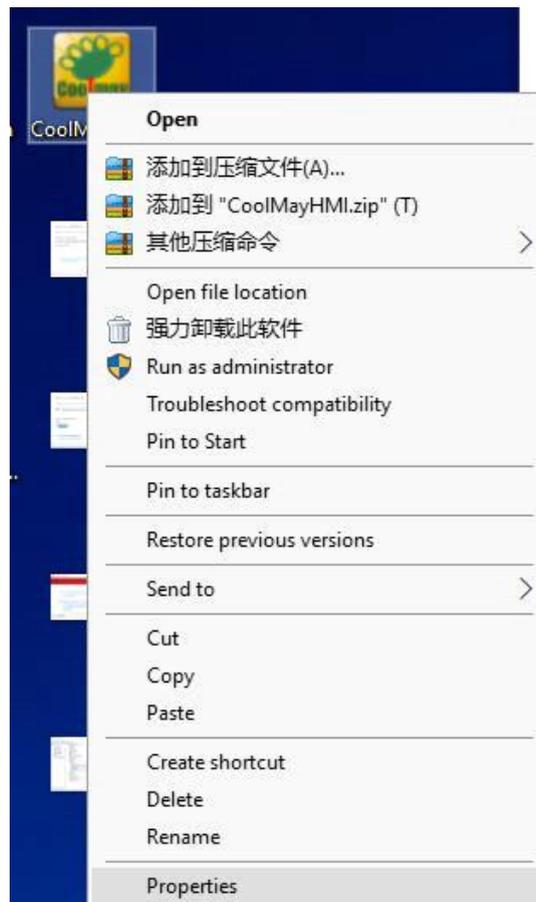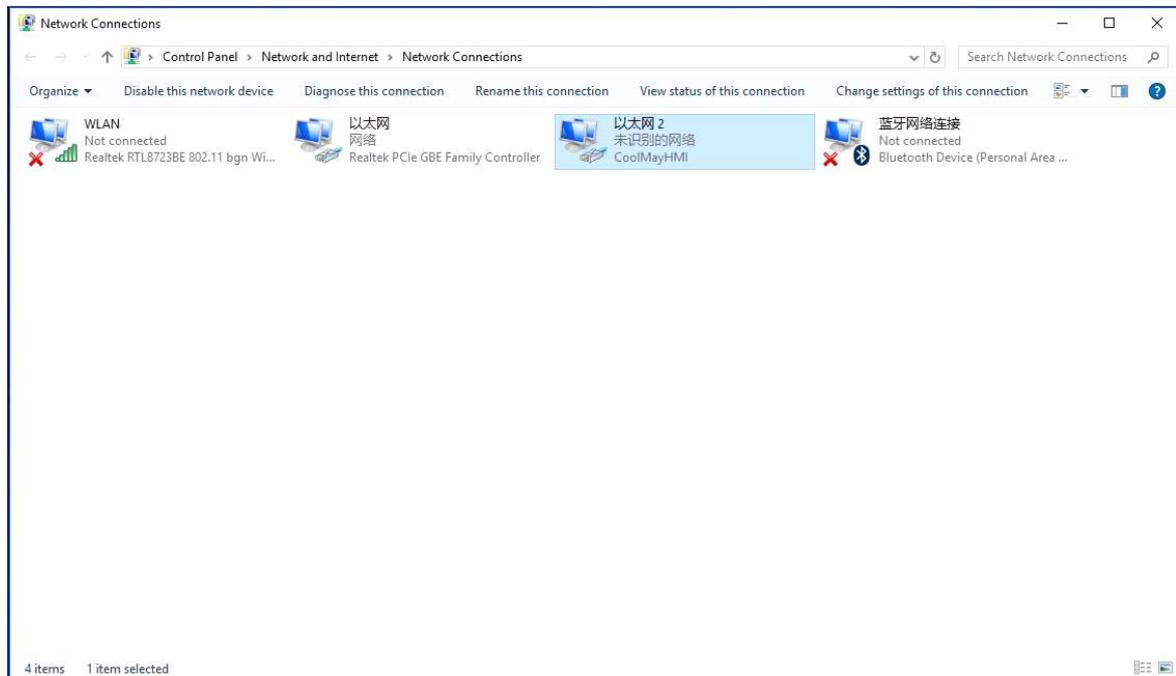


12: click shortcut icon and then click [Advanced]

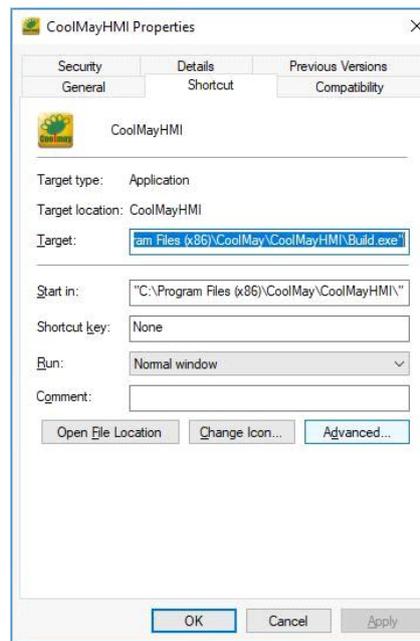


13: Tick [Run as administrator], then click [OK]. After well set, the driver will be operated by administrator every time.

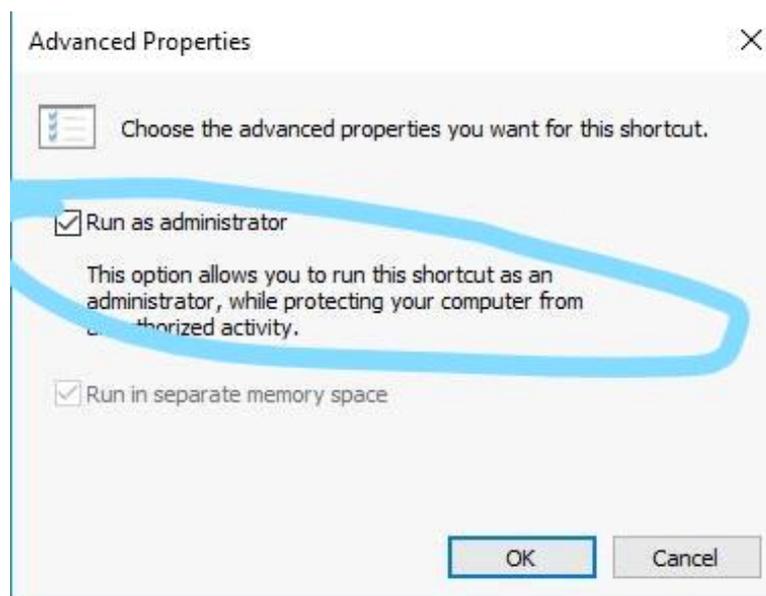


Note: If it prompts [the terminal can't be found and, close it and try again] when downloading software, please confirm whether IP of CoolMayHMI is correctly acquired.

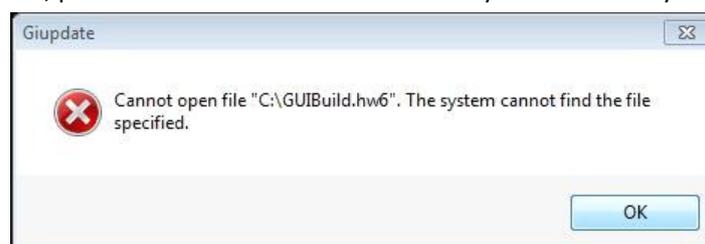


1. Click the button of network and shared center

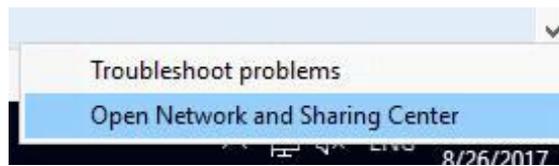

2. Click button of changing adapter setting

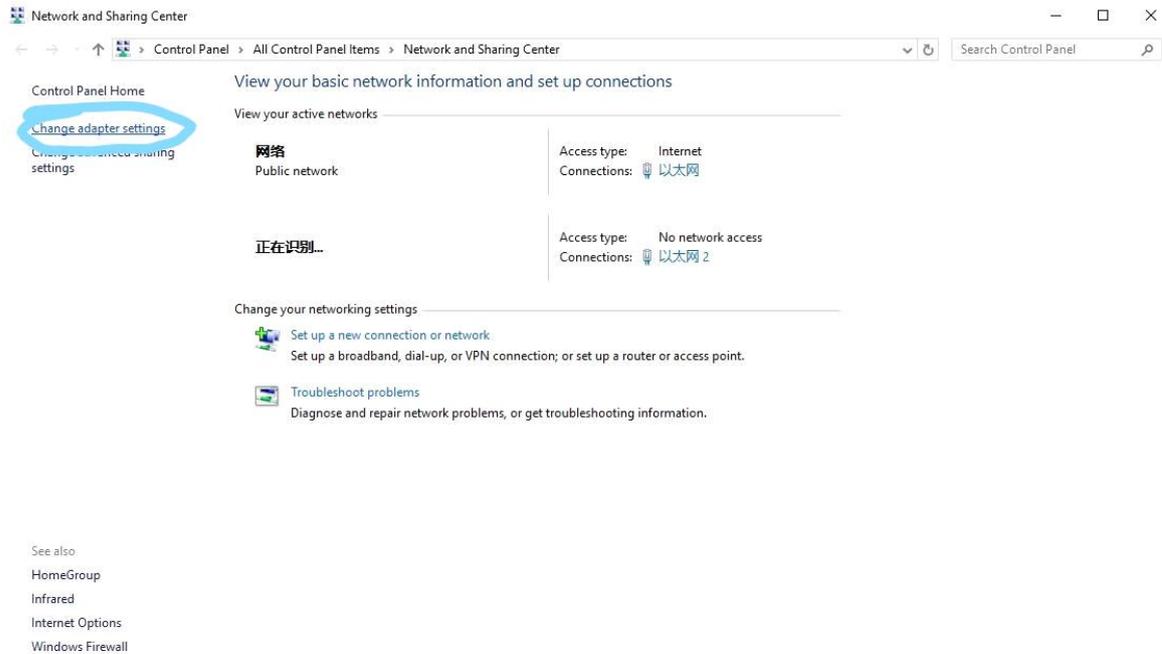

3. Right click local link that correspondent CoolmayHMI, and click attribute

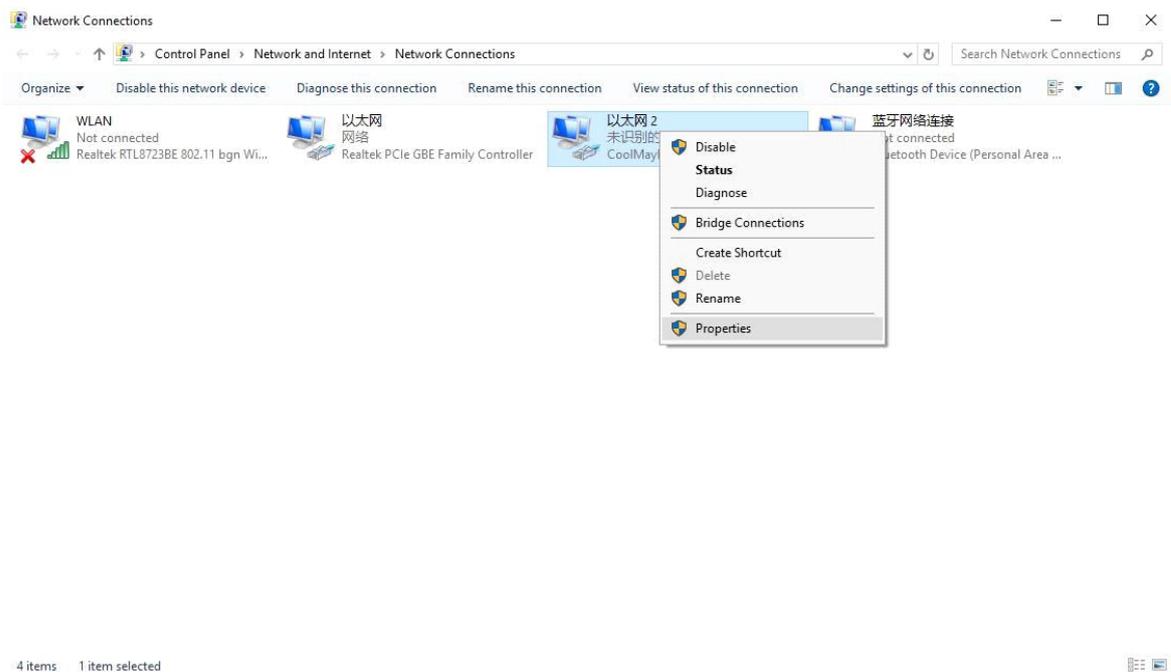

4. Double click Internet protocol version 4(TCP/IPv4)
5. Choose using below IP address, IP address can be set 222.222.222.\*(the last number can be set any number during 2~221 ), subnet mask must be fixed settled255.255.255.0

Internet 协议版本 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

IP address: 222 . 222 . 222 . 6

Subnet mask: 255 . 255 . 255 . 0

Default gateway: . . .

Obtain DNS server address automatically

Use the following DNS server addresses:

Preferred DNS server: . . .

Alternate DNS server: . . .

Validate settings upon exit

Advanced...

OK Cancel